

Monnit Wireless Sensors and Ethernet Gateway User's Guide

**For Use With iMonnit Online Software
and iMonnit Express PC Software**


MonnitLink™ Ethernet Gateway Quick Start

- Create a Monnit user account with assigned wireless gateways and sensors.
- Attach the antenna to the antenna connector on the back panel of the Ethernet gateway (make sure the connection is snug, but do not overtighten).
- Plug an Ethernet cable with internet connectivity into the gateway.
- Plug the power supply into a power outlet then connect to the gateway.
- Once all three lights turn green, your network is ready to bring sensors online.

1. Create a Monnit User Account and Setup Sensor Network

If this is your first time using the iMonnit online system site, you will need to create a new account. If you have already created an account you can skip to the “Logging into the Online System” section. The following instructions will guide you through the account creation process.


1. In a web browser, navigate to <https://www.imonnit.com>.
2. Click the “Get Started Here” button to create an account.



3. Follow the on-screen instructions to enter your account and contact information.
4. After entering your account and contact information, you will be prompted to create your first sensor network. Simply enter a name for this network.
5. Add the information from your MonnitLink™ gateway then click the “Assign Gateway” button.

Gateway ID ?


Gateway Code ?

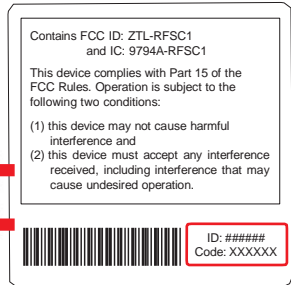

- 6a. Add the information from your first Monnit wireless sensor then click the “Assign Sensor” button.

Sensor ID ?

Sensor Code ?

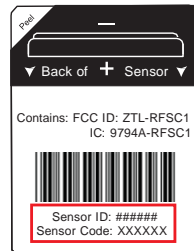


- 6b. On the next screen, enter a name for the wireless sensor and use the drop down to tell us how you are going to be using the wireless sensor. (This allows us to suggest settings for your sensor.) When finished, click the “Continue” button.

7. Confirmation Screen.

When you have finished adding the sensor, you will see a confirmation screen. At this point you can assign notifications to the sensor (see *Using The iMonnit™ Online Wireless Sensor System*), assign additional sensors to your account or click "Done" to go to your sensors overview page.

2. Using the MonnitLink™ Ethernet Gateway

1. Understanding the Ethernet Gateway Lights



Light 1 - Indicates the Ethernet cable is plugged in. A green light indicates ready and working, a red light indicates there is a problem.


Light 2 - Indicates the Ethernet has internet connectivity and can reach the online monitoring system. A green light indicates ready and working, a red light indicates there is a problem. A flashing green light indicates network traffic to the internet.

Light 3 - Indicates sensor network activity. A green light indicates ready and working, a red light indicates there is a problem. A flashing green light indicates radio traffic from the sensors.

For help troubleshooting Ethernet gateway lights view:

<http://www.monnit.com/support/hardware/gateways/ethernet/troubleshooting-a-monnit-link-ethernet-gateway>

2. Ethernet Gateway Controls

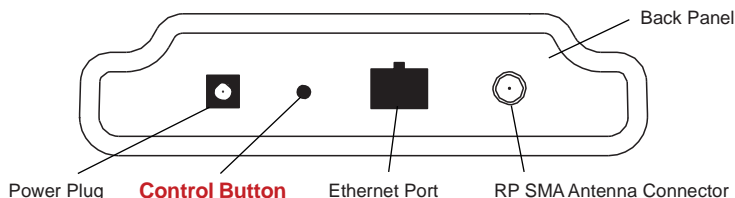

Using the Control Button:

1) A short press will trigger the gateway to immediately send all stored sensor messages to the online system and download any pending system messages to deliver to the sensors. (The default heartbeat for the Ethernet gateway is 5 minutes.)

2) Press and hold to reset the gateway to factory settings. Factory settings will be reset to defaults, including the heartbeat setting of 5 minutes on both the gateway and in the online system. DHCP, server addressing and port are all restored to default settings, for example. You will need to login to the online system after resetting the gateway to reconfigure the gateway to your desired settings.

Note: If your gateway powers up with the lights scrolling from left to right, it has entered into boot loader mode accidentally. Make sure the button is free from obstruction and reboot the gateway by removing the power plug, waiting for 10 seconds then reinserting the power plug.

3. Configuring The Ethernet Gateway

The Ethernet Gateway collects data from all sensors within range and is preconfigured to batch deliver the sensor messages to the online system every 5 minutes.

The Ethernet Gateway uses DHCP (Dynamic Host Configuration Protocol) to automatically acquire a network address from the LAN (Local Area Network). In the event that it needs to have an address manually assigned to it, you can assign an IP address as well as a gateway mask and default DNS through the online interface. For more information on configuring the Monnit Ethernet Gateway please view the support documentation at http://www.monnit.com/pdf/Ethernet_Gateway_Configuration.pdf.

Note: This advanced configuration is NOT required in most instances. In the event that it is required, you can initialize the gateway on a network that uses the default DHCP settings, or you can follow the instructions for changing the configuration settings on a PC, which are included later in this User's Guide.

Upon logging into the online system as an administrator, select "My Account" then choose the edit icon next to your sensor network. From there you can alter the heartbeat of the Ethernet Gateway as well as edit any other configurations available. There is also a quick link to reset all gateway settings to factory defaults.

3. Using Your Monnit Wireless Sensors


Insert Batteries Into Wireless Sensors

Important: Make sure your sensors are at least 3ft. away from Ethernet Gateway.

Peel back the black sticker cover of the battery slot and slide the coin cell battery into the sensor as shown in fig.1. It will power on within 10-20 seconds. Once online, your sensor is ready to be deployed. If you wish to change a sensor configuration, change the parameter in the software. The new parameters will be transmitted to the sensor on the next heartbeat. If you need a more immediate response from the sensor, power cycle the sensor by removing, then re-inserting the battery.

Notes:

- If the sensor status indicator does not change, reset the sensor by removing the battery.
- Wait 60 seconds then re-insert the battery.
- When inserting the battery, make sure to push the battery all the way back using a paper clip.
- Note the proper orientation of battery in fig.1

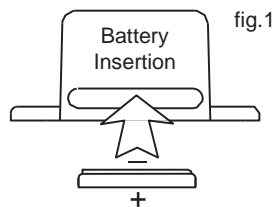

Warning: Your sensors ship with a 2 hour heartbeat.

It is recommended that unless you are using the AA battery solution, you should set the heartbeat to no faster than one hour to preserve battery life. When changing a sensor's heartbeat, the new configuration information will be sent to the sensor on it's next heartbeat. If you want to update the sensors immediately you can reset them manually.

Manual Sensor Reset Process:

- 1 - Using the end of a paper clip, push the batteries out of the sensors through the small hole in the top of the sensor
- 2 - Change the sensor heartbeat through the online system
- 3 - Re-insert the batteries into the sensors

4. Using The iMonnit™ Online Wireless Sensor System

1. Understanding The Online Interface

When you log into the online system, the default view shows all of your sensors last recorded data.



Menu System

- Overview* - Shows all sensors in the account and their last readings.
- Notifications* - Manage sensor notifications and show all sent notifications.
- Manage* - Manage networks, sensors and gateways.
- Reports* - Printable account and sensor network reports.
- Sensor Maps* - Visual maps to help you track sensor placement.
- Support* - Support information for using sensors and software.





View / Sort Features

This section allows you to sort the sensors being viewed and search for sensors on your account.

Sensor Overview

Displays sensors on your account with their last reading and status information. Clicking on a sensor row expands the "Sensor Detail View" allowing you to view detailed information for the selected sensor.

To the left side of each sensor row is an indicator to help you understand the current status of the sensor.

-  Sensor is checking in and within user defined safe parameters.
-  Sensor has met or exceeded a user defined threshold or triggered event.
-  Sensor has not checked in (inactivity alert sent).
-  No sensor readings will be recorded (Inactive)

Sensor Details View

Clicking on a sensor row on the “Overview” page expands the row to include a detailed sensor view for the selected sensor.


Select a tab to change between:

- History* - Displays a history of the selected sensor's data.
- Chart* - Displays a graphical view of the selected sensor's data.
- Notifications* - Allows you to manage notifications for the sensor.
- Export* - Allows you to archive data by exporting as a .csv file.
- Edit* - Allows you to manage sensor settings.
- Calibrate* - Available on certain sensor types to provide more accurate data.

Note: The data shown on the chart, notification, history and export tabs is based on the date range indicated on the upper right side of the sensor detail information. To change the date range, click inside the date box.

2. History and Chart Views.

Clicking on the “History” or “Chart” tabs within the sensor detail panel allows you to view the sensor's data history as time stamped data or in a graphical chart format.

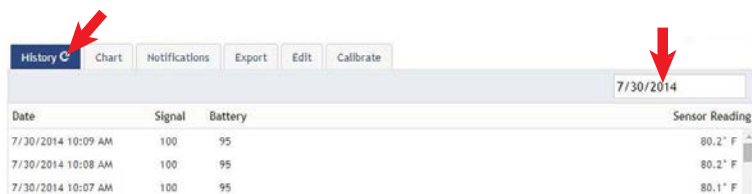

Note: To change the date range of the viewable information, click on the date range box at the top right of the sensor detail panel.

3. Configuring Sensor Settings

To edit a sensors operation settings, click on the sensor overview row to display the details view. Click on the “Edit” tab to access the sensor configuration panel.

The screenshot shows the 'Temperature Sensor Configuration' panel. At the top, there is a navigation bar with tabs: History, Chart, Notifications, Export, **Edit** (highlighted with a red arrow), and Calibrate. Below the tabs, the panel is titled 'Temperature Sensor Configuration'. The settings are as follows:

- Sensor Name:** Temperature - 35653
- Display as:** FAHRENHEIT
- Heartbeat Interval:** 120 minutes
- Sensor is on:** ALL DAY
- Aware State:** (with a question mark icon)
- Aware State Heartbeat:** 120 minutes
- Assessments per Heartbeat:** 6 (Assessment frequency about 20 minutes.)
- Use Aware State:** Below: 84.9° or Above: 105.°
- Aware State Buffer:** 0°
- Synchronize:** OFF
- Failed transmissions before link mode:** 2

A 'Save' button is located at the bottom right of the panel.

The sensor edit panel allows you to set the primary configurations for the sensor. Mousing over the question mark icon by each setting will provide an explanation of that setting. When you have finished making changes, press the “Save” button at the bottom of this section.

Note: Be sure to click the “Save” button anytime you make a change to any of the sensor parameters. All changes made to the sensor settings will be downloaded to the sensor on the next sensor heartbeat (check-in). Once a change has been made and “Saved,” you will not be able to edit that sensor’s configurations again until the sensor has downloaded the new setting.

4. Sensor and/or Gateway Notification(s).


Notifications for a single sensor can be created, deleted or edited by clicking the "Notifications" tab in a sensor's detail view.

The screenshot shows the iMonnit Online Wireless Sensors Portal. The top navigation bar includes 'Overview', 'Notifications', 'Manage', 'Reports', 'Sensor Maps', and 'Support'. The 'Notifications' tab is highlighted with a red arrow. Below the navigation bar, there is a dropdown menu for 'Demo Network' and a 'View Gateways' link. The main content area displays sensor details for 'Humidity - 35565', including a data reading of '50.64% @ 84.6° F', a last check-in time of '7/28/2014 12:12 PM', and a signal strength indicator. Below the sensor details, there is a 'Last Check-in' and 'Expected Next Check-in' section. The 'Notifications' sub-tab is highlighted with a red arrow. Below the sub-tab, there is a 'Recently Sent Notifications' section and a 'Current Notification Settings' section. A 'Create New' button is highlighted with a red arrow.

Notifications can be created, deleted or edited for any sensor or group of sensors by clicking on "Notifications" in the main menu.

The screenshot shows the iMonnit Online Wireless Sensors Portal. The top navigation bar includes 'Overview', 'Notifications', 'Manage', 'Reports', 'Sensor Maps', and 'Support'. The 'Notifications' tab is highlighted with a red arrow. Below the navigation bar, there is a dropdown menu for 'Demo Network' and a 'View Gateways' link. The main content area displays the 'Notification List' table. The first row of the table is highlighted with a red box. Below the table, there are buttons for 'Toggle On/Off', 'Click to Open Detail View', 'Send Test', 'Edit', and 'Delete'. A callout box says 'Create a New Notification'.

When creating a notification, you will need to select the type of notification to create.



- **Sensor Reading Notification** - Reading notifications are sensor specific (i.e. water sensor = trigger alert when water present, temp sensor = trigger alert when temp is above 70F, etc.). When creating a sensor reading notification, you will need to choose the sensor type you are creating the alert for. The select box will only show sensor types that are currently being used on your sensor network.
- **Battery Notification** - Allows users to define a battery power percentage level that will trigger an alert from the system, warning them to replace batteries.
- **Inactivity Notification** - Set-up "Inactivity" notifications to alert you when your sensors have stopped communicating with the servers. Failure to set up an "Inactivity" notification will result in no email/SMS text being sent should your sensors stop communicating with the servers.

- **Advanced Notifications** - Allows the user to set notifications based on advanced rules, such as comparing past data points with the current one to determine if a notification should be sent.
- **Existing Notifications** - Use notifications that have already been created on your account with the selected sensor.


Notification Settings

This area allows the user to set notification parameters such as naming the notification, customizing the notification message and setting sensor conditions that will trigger the notification.




People to Notify

The list on the left shows all available users on the account. You can type into the search box to filter large lists of users. Select the user(s) to receive the notification and click the arrow button to add them to the recipient list. By default, email notifications are activated. Clicking the notification delivery method icon toggles them on and off (green is on, grey is off). If the user should receive text message notifications, click on the phone icon to turn it green.

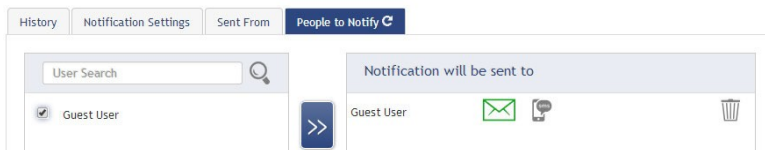


Sent From

Allows you to assign devices (sensors and gateways) that will cause the notification to be sent. When a notification is sent from the system, it will automatically include the device name and the data that caused the notification to be sent. A single notification can be assigned to multiple sensors or gateways. Sensor reading notifications can only be assigned to sensors of the same type. General notifications such as "battery status", can be assigned to any or all sensors.

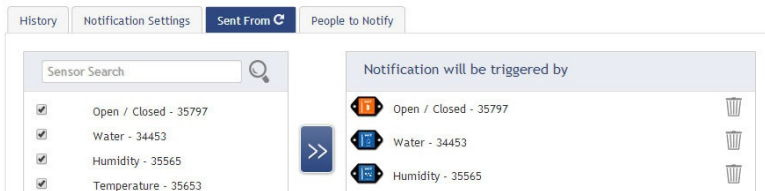

Devices to Notify


If you have a Monnit Control or Notifier A/V device on your network, you will also see a “Devices to Notify” tab. This will allow the notification to interact with these types of devices. Select a device from the list on the left and click the arrow button to add it to the recipient list. Clicking the control icon toggles their setting.

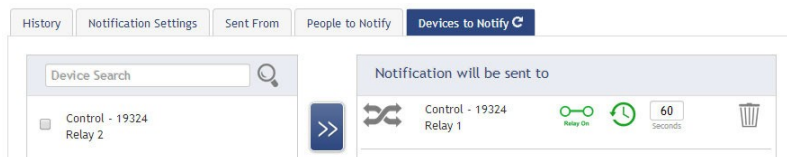

Note: Control devices have two relays per device that are controlled separately. You can turn a relay on, off or toggle the state. You can also set a duration by clicking on the timer icon. This will perform the selected toggle (on/off/toggle) for a set duration, then change back.

5. Exporting Sensor Data

Clicking on the “Export” tab within the sensor data window allows you to export sensor data to a comma separated value (.csv) file or send the sensor data to an external web source.

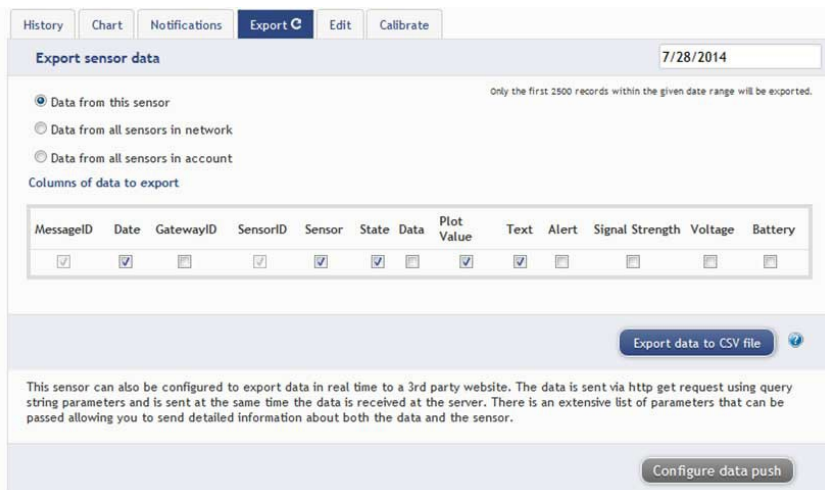

MessageID	Date	GatewayID	SensorID	Sensor	State	Data	Plot Value	Text	Alert	Signal Strength	Voltage	Battery
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

To export sensor data you must first select the date range for the data you want to export. Once the date range is selected, determine whether you want sensor data from the selected sensor only, from all sensors in the network or all sensors assigned to the account. When you are finished, click on “Export Data” at the bottom of this window. The data will be exported to a comma separated value (.csv) file format. **Note:** Only the first 2,500 records within the selected date range will be exported.

You can alternately send your sensors' incoming data to a 3rd party by clicking on the “Configure data push” button at the bottom of the window. From this area you can pass data from your wireless sensor network devices to another service in real time. This is done by coding the data into a url query then sending the data via http get request at the time data is received. There is an extensive list of parameters that can be passed, as listed in the viewed window, that allow you to send detailed information about both the data and the sensor.

6. Calibrating Sensor Data

Certain wireless sensors can be calibrated for more accurate readings (ex. temperature sensors). If calibration is possible for a sensor, the "Calibrate" tab will be visible in the detail view. To calibrate a sensor, replace the last reading with the more accurate reading and click "Calibrate". All future readings from the sensor will be based off the new calibration setting.

HistoryChartNotificationsExportEditCalibrate

Calibrate Sensor

Actual reading is degrees

Fahrenheit

CalibrateDefault

7. Manage Sensor Networks

To view or edit information about your wireless sensor network(s), click on "Manage" in the main navigation. This area allows you to edit network details, create new sensor networks, and manage wireless gateways and sensors for your network(s).

OverviewNotificationsManageReportsSensor MapsSupport

Demonstration Network

Add Network

Demonstration Network

Network ID1680

NameDemonstration Network

Count of Gateways/Sensors on this Network1/3

Send notifications for this NetworkTrue

Edit Network Details

Gateway List

Name	Gateway ID	Gateway Type	Band	Status
USB - 3849	3849	USB	9/5/2012 11:00	<div><div></div><div></div><div></div></div> <div><div></div><div></div><div></div></div>

Sensor List

Sensor Name	Sensor ID	Sensor Type	Firmware	Band	Active	Status
Temperature	402	Temperature	2.0.1	900 MHz	<input checked="" type="checkbox"/>	<div><div></div><div></div><div></div></div> <div><div></div><div></div><div></div></div>
Open / Closed	13348	Open / Closed	2.0.0.0	900 MHz	<input checked="" type="checkbox"/>	<div><div></div><div></div><div></div></div> <div><div></div><div></div><div></div></div>
Activity	21188	Activity			<input checked="" type="checkbox"/>	<div><div></div><div></div><div></div></div> <div><div></div><div></div><div></div></div>

Click to Manage

Create a new network

Select which network to view

Edit network information

Add a device to the network

Remove device from network

Clear sensor history and data

Move device to another network

Note: Some buttons and features are only visible if there is more than one sensor network setup on the account, such as the network selection box in the upper right corner.

If more than one sensor network is setup on the account, you can easily move gateways and sensors from one network to another by clicking on the "Move Device" button at the far right of the device's "Status" section.

If you clear a sensor's data, the data history is deleted from the entire system and can not be recovered. We recommend exporting a sensor's data history using the export function in the sensor details view ("Overview" page) before clearing the sensor's data if you want to have a record of the data.

5. Advanced Settings and Interfacing with the Monnit Ethernet Gateway Through iMonnit.

1. Ethernet Gateway Edit Screen

When you log into the online system, the default view shows all of your sensors last recorded data.

History

Notifications

Export

Edit

Sensor List

Name

TEST O/S

Gateway Type

Ethernet_Gateway_3.0

MAC Address

00:50:C2:E3:E8:13

Heartbeat Minutes (default: 5)

5

Interval for sensor message delivery to the server.

Enterprise Server Host Address (default: t1.sensorsgateway.com)

t1.sensorsgateway.com

Edits the server the gateway is pointed to.

Enterprise Server Communication Port (default: 3000)

3000

Edits the port for communication.

Use DHCP

☒ Uncheck to set a Static IP.

Force Transmit on Aware

☒ Urgent messages are sent immediately instead of being queued.

Configure External Interfaces

[Configure](#) Set up for Enterprise Interfacing options.

Reform Network

[Reform](#) Resets the wireless network and sensor list.

Reset Gateway to Factory Defaults

[Reset](#) Configure all settings to factory defaults.

Save

Cancel

The name can be edited to whatever you prefer.

The gateway type should NOT be edited, unless you are directed to do so by a Monnit Support Representative.

The unit's MAC Address is viewable here, should you need to access it.

The heartbeat dictates how often the gateway communicates with the server. This is both for communication passed up to the server from the gateway and the communication passed to the gateway from the server. Exceptions to this interval include Aware messages from sensors.

The Enterprise Server Host address and Communication Port will always be one of Monnit's servers and ports by default, but should you require that the gateway be pointed to your private servers, the gateway can be configured to do so. Make sure to set the appropriate port as well, if port 3000 will not be used.

To set the Static IP, uncheck the Use DHCP box and fill in the settings:



A screenshot of a configuration form for static IP settings. It includes a 'Use DHCP' checkbox which is unchecked. Below it are five text input fields: 'Static IP (Use DHCP: 0.0.0.0)' with '0.0.0.0', 'Network Mask' with '255.255.255.0', 'Default Gateway' with '0.0.0.0', and 'Default DNS Server' with '0.0.0.0'.

Use DHCP	<input type="checkbox"/>
Static IP (Use DHCP: 0.0.0.0)	0.0.0.0
Network Mask	255.255.255.0
Default Gateway	0.0.0.0
Default DNS Server	0.0.0.0


The force transmit on Aware box tells the gateway to deliver immediately the messages marked as Aware from the sensors. If this box is unchecked and the setting is saved, then the gateway only dumps the sensor messages it has been collecting on the Heart-beat Interval. This allows for controlled communication when sporadic communication from the gateway is either unacceptable or not ideal.

2. External Interfaces:

Data collected by the Ethernet Gateway from the sensors in the network can be accessed when these interfaces are turned on. Multiple interfaces can be active at the same time. All interfaces require that the Ethernet gateway be set to a Static IP address. (By default, the unit uses DHCP).

Real Time TCP Interface

Poll on the gateway's assigned port to retrieve gateway and sensor data.

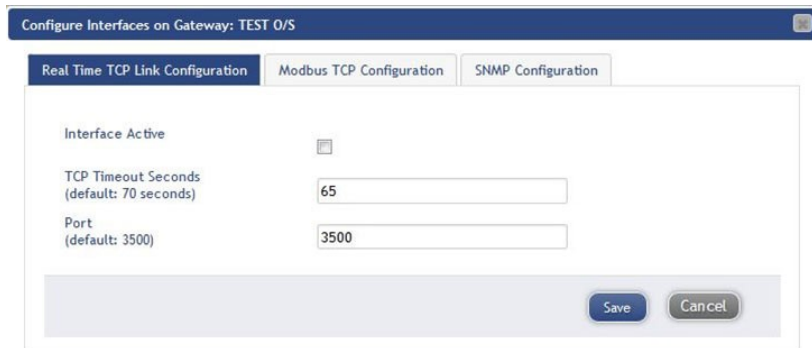

A screenshot of a 'Configure Interfaces on Gateway: TEST O/S' dialog box. It has three tabs: 'Real Time TCP Link Configuration' (selected), 'Modbus TCP Configuration', and 'SNMP Configuration'. The 'Real Time TCP Link Configuration' tab shows an 'Interface Active' checkbox (unchecked), a 'TCP Timeout Seconds (default: 70 seconds)' input field with '65', and a 'Port (default: 3500)' input field with '3500'. At the bottom right are 'Save' and 'Cancel' buttons.

Configure Interfaces on Gateway: TEST O/S	
Real Time TCP Link Configuration Modbus TCP Configuration SNMP Configuration	
Interface Active	<input type="checkbox"/>
TCP Timeout Seconds (default: 70 seconds)	65
Port (default: 3500)	3500
Save Cancel	

Mark the interface active and Save. The default port is 3500, but can be edited.

MODBUS TCP Interface

Use MODBUS TCP software to pull in gateway and sensor data. Monnit provides a register map. Check the box to make the interface Active and Save.

Configure Interfaces on Gateway: TEST 0/S

Real Time TCP Link Configuration

Modbus TCP Configuration

SNMP Configuration

Interface Active

☐

Queue Expiration
(default: 720 minutes)

720

TCP Timeout Minutes
(default: 5 Minutes)

5

Port
(default: 502)

502

Save

Cancel

The MODBUS TCP Interface will store all data values in 16-bit registers. The registers and their data fields are mapped below:

	Field	Description	Register	Data Address
GATEWAY	Gateway ID_High	The first 16 bytes of a 32 byte serial ID number	40001	0
REGISTERS	Gateway ID_Low	The last 16 bytes of a 32 bytes serial ID number	40002	1
	Gateway Version	The version of gateway firmware on the device	40003	2
	Gateway Device Count	The number of devices (sensors & gateways) in its network	40004	3
SENSOR	Sensor ID_High	The first 16 bytes of a 32 byte serial ID number	40101	100
REGISTERS	Sensor ID_Low	The last 16 bytes of a 32 bytes serial ID number	40102	101
	Device Type	The unique type identifier for the sensor profile	40103	102
	Data Age	The number of seconds that have elapsed since the last data was retrieved	40104	103
	Is Device Active	0 indicates no data for this slot	40105	104
	Is Aware	Becomes aware when a sensor threshold has been breached	40106	105
	Voltage	Battery voltage	40107	106
	RSSI	Signal Strength indicator 0-100%	40108	107

	Data 1	Sensor Data Field 1	40109	108
	Data 2	Sensor Data Field 2	40110	109
	Data 3	Sensor Data Field 3	40111	110
	Data 4	Sensor Data Field 4	40112	111
	Data 5	Sensor Data Field 5	40113	112
	Data 6	Sensor Data Field 6	40114	113
	Data 7	Sensor Data Field 7	40115	114
	Data 8	Sensor Data Field 8	40116	115

SNMP Poll and Trap Interface

Use SNMP software to pull in gateway and sensor data. Monnit provides a .MIB file. There are four available interfaces. Set the SNMP Interface Address for each one the address of the device sending the SNMP request). Mark the interface Active and Save.

Configure Interfaces on Gateway: TEST O/S

Real Time TCP Link Configuration Modbus TCP Configuration **SNMP Configuration**

Queue Expiration (default: 720 minutes)

SNMP Interface 1

SNMPInterface1Active ☐

SNMPInterfaceAddress1


SNMPInterfacePort1

SNMPTrap1Active ☐

SNMPTrapPort1

The MIB file is available through here:
resources.monnit.com/content/downloads/MonnitEGW-MIB_v1

The MIB Tree looks like this:

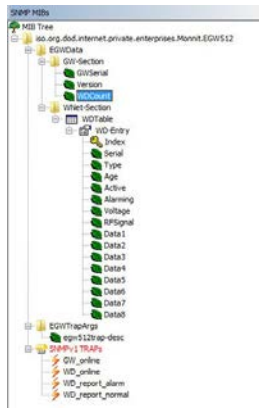

Ethernet Gateway MIB tree with a short description of each field:

EGW Data			Description
	*GW Section		Gateway Section
		*GW Serial	Gateway Serial ID
		*Version	Gateway Firmware Version
		*WD Count	Wireless Device Count
	*WNetSection		Wireless Network Section
		*WD Entry	Wireless Device Entry
		*Index	Index Number
		*Serial	Wireless Device Serial ID
		*Type	Device Type (eg temp, water, motion sensor, etc)
		*Age	Number of seconds since last data recording
		*Active	Indicates if the wireless device is reporting in as expected
		*Alarming	Indicates if the wireless device has detected data that is urgent or breaches a threshold
		*Voltage	Battery voltage recorded at the time of data reading
		*RFSignal	Signal Strength recorded on data reading delivery
		*Data1	Data recorded by wireless device (eg temperature, water detected, motion detected, etc)
		*Data2	Data recorded by wireless device (eg temperature, water detected, motion detected, etc)
		*Data3	Data recorded by wireless device (eg temperature, water detected, motion detected, etc)
		*Data4	Data recorded by wireless device (eg temperature, water detected, motion detected, etc)
		*Data5	Data recorded by wireless device (eg temperature, water detected, motion detected, etc)
		*Data6	Data recorded by wireless device (eg temperature, water detected, motion detected, etc)
		*Data7	Data recorded by wireless device (eg temperature, water detected, motion detected, etc)
		*Data8	Data recorded by wireless device (eg temperature, water detected, motion detected, etc)

6. Setting up the Ethernet gateway for use with iMonnit Express

iMonnit Express (PC Software) Setup

Visit <http://www.monnit.com/support/downloads/> to download and install the iMonnit Express software.


- Launch the iMonnit Express installer and follow the on-screen instructions.
- Launch the iMonnit Express program.



- Activate the Express software with the code you received when purchasing.




- Add the gateway(s) and wireless sensors to the software.

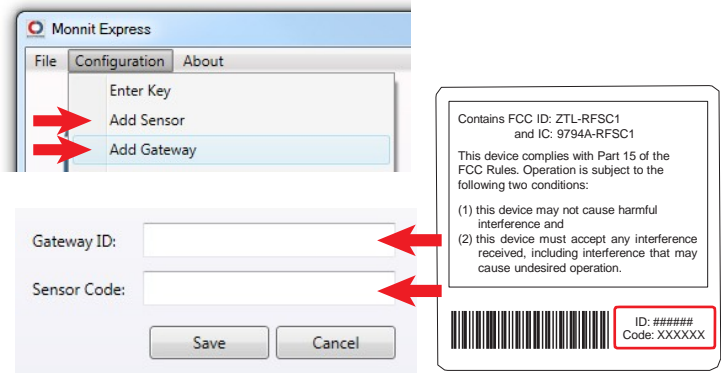

- Verify that the gateway was added successfully by checking the Gateways list.




- Click on “About”, then “Local IP Addresses” and make note of the IP address that your computer is using on your network.

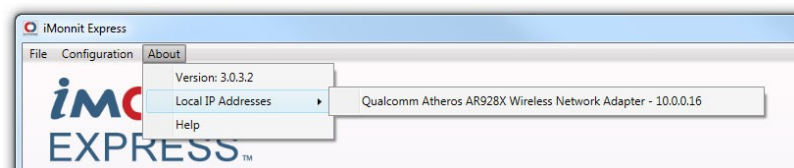

- Connect the Ethernet Gateway directly to the Ethernet port of your PC using a standard Ethernet cable. Confirm that the PC has no other internet connection (turn off Wi-Fi). Confirm the PC firewall does not prohibit an inbound connection. Plug power cable into the Ethernet gateway.
- Plug in the power cable.
- While the device is booting, press and hold the Reset Button on the back of the gateway. The button must be held in the down position by the time the third green light illuminates, or else another attempt will need to be made. When the device finishes booting, all three lights will toggle red, green. Release the button and the device is in local configuration mode. Do not hold the Reset button for more than four seconds (that will factory reset the device).

The lights will flash green once every other second while the device attempts to resolve Ethernet Link State. The lights will flash green once every second while the device attempts to resolve IP addresses with the host PC. Finally, the lights will flash green twice every second when device is waiting for valid web traffic.

- Once the PC has setup the direct network, use a web browser (e.g. Chrome) and go to “192.168.100.1”. The Ethernet gateway Setup screen should now be displayed. Note: The lights will all turn solid green once this connection has been established.
- Click on the “Data Interfaces” tab.
- Under “Default Server Configuration” enter the IP address that you noted from the iMonnit Express software into the primary and secondary server [URL/IP] boxes, and use 3000 as the default communication port, then click “Save Changes”.

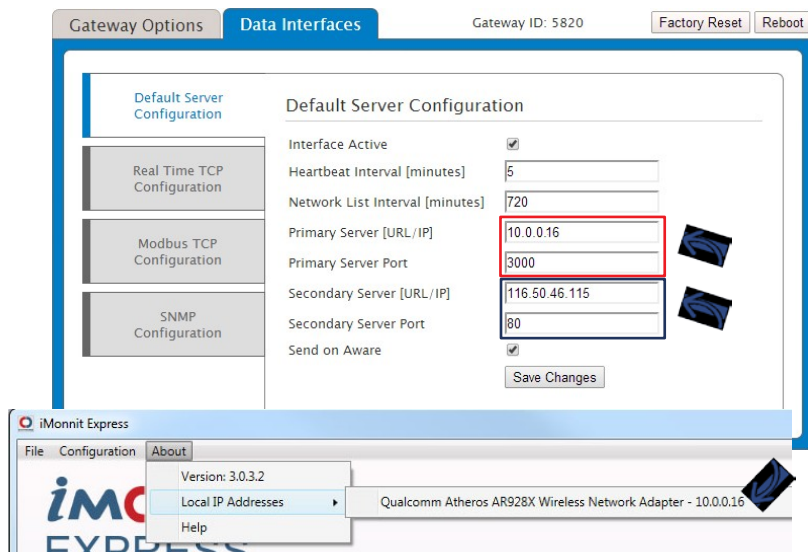

- When finished, click the “Reboot” button on the top right side of the page to restart the gateway.
- When the lights begin flashing on the gateway, you can unplug the power to the gateway and disconnect it from the computer.
- Reactivate the Wi-Fi or other Internet connection for the computer, so it can connect to the network.
- Plug your Ethernet gateway into your Internet router and power up the Ethernet gateway. All three lights should go green now, and your gateway should report into Monnit Express.

If it does not, check that the PC has the internet connection turned on, recheck your IP Address, power up your gateway and make sure the gateway is added into Monnit Express. (If you left your secondary set to point to sensorsgateway.com (which is iMonnit) and the lights on your gateway are green, check iMonnit to see if the gateway is reporting in there. If so, power cycle the gateway and try again.)

Error Reporting, Troubleshooting and Support

For technical support and troubleshooting tips please visit our support library online at <http://www.monnit.com/support/>. If you are unable to solve your issue using our online support, email Monnit support at support@monnit.com with your contact information and a description of the problem, and a support representative will call you within one business day.

For error reporting, please email a full description of the error to support@monnit.com.

Warranty Information

(a) Monnit warrants that Monnit-branded products will be free from defects in materials and workmanship for a period of one (1) year from the date of delivery with respect to hardware and will materially conform to their published specifications for a period of one (1) year with respect to software. Monnit may resell sensors manufactured by other entities and are subject to their individual warranties; Monnit will not enhance or extend those warranties. Monnit does not warrant that the software or any portion thereof is error free. Monnit will have no warranty obligation with respect to Products subjected to abuse, misuse, negligence or accident. If any software or firmware incorporated in any Product fails to conform to the warranty set forth in this Section, Monnit shall provide a bug fix or software patch correcting such non-conformance within a reasonable period after Monnit receives from Customer (i) notice of such non-conformance, and (ii) sufficient information regarding such non-conformance so as to permit Monnit to create such bug fix or software patch. If any hardware component of any Product fails to conform to the warranty in this Section, Monnit shall, at its option, refund the purchase price less any discounts, or repair or replace non-conforming Products with conforming Products or Products having substantially identical form, fit, and function and deliver the repaired or replacement Product to a carrier for land shipment to customer within a reasonable period after Monnit receives from Customer (i) notice of such non-conformance, and (ii) the non-conforming Product provided; however, if, in its opinion, Monnit cannot repair or replace on commercially reasonable terms it may choose to refund the purchase price. Repair parts and replacement products may be reconditioned or new. All replacement products and parts become the property of Monnit. Repaired or replacement products shall be subject to the warranty, if any remains, originally applicable to the product repaired or replaced. Customer must obtain from Monnit a Return Material Authorization Number (RMA) prior to returning any Products to Monnit. Products returned under this Warranty must be unmodified.

Customer may return all Products for repair or replacement due to defects in original materials and workmanship if Monnit is notified within ninety (90) days of customer's receipt of the product. Monnit reserves the right to repair or replace products at its own and complete discretion. Customer must obtain from Monnit a Return Material Authorization Number (RMA) prior to returning any products to Monnit. Products returned under this Warranty must be unmodified and in original packaging. Monnit reserves the right to refuse warranty repairs or replacements for any products that are damaged or not in original form. For products outside the ninety-day warranty period repair services are available at Monnit at standard labor rates for a period of one year from the Customer's original date of receipt.

(b) As a condition to Monnit's obligations under the immediately preceding paragraphs, Customer shall return Products to be examined and replaced to Monnit's facilities, in shipping cartons which clearly display a valid RMA number provided by Monnit. Customer acknowledges that replacement products may be repaired, refurbished or tested and found to be complying. Customer shall bear the risk of loss for such return shipment and shall bear all shipping costs. Monnit shall deliver replacements for Products determined by Monnit to be properly returned, shall bear the risk of loss and such costs of shipment of repaired products or replacements, and shall credit Customer's reasonable costs of shipping such returned Products against future purchases.

(c) Monnit's sole obligation under the warranty described or set forth here shall be to repair or replace non-conforming products as set forth in the immediately preceding paragraph, or to refund the documented purchase price for non-conforming Products to Customer. Monnit's warranty obligations shall run solely to Customer, and Monnit shall have no obligation to customers of Customer or other users of the Products.

Limitation of Warranty and Remedies.

THE WARRANTY SET FORTH HEREIN IS THE ONLY WARRANTY APPLICABLE TO PRODUCTS PURCHASED BY CUSTOMER. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED. MONNIT'S LIABILITY WHETHER IN CONTRACT, IN TORT, UNDER ANY WARRANTY, IN NEGLIGENCE OR OTHERWISE SHALL NOT EXCEED THE PURCHASE PRICE PAID BY CUSTOMER FOR THE PRODUCT. UNDER NO CIRCUMSTANCES SHALL MONNIT BE LIABLE FOR SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES. THE PRICE STATED FOR THE PRODUCTS IS A CONSIDERATION IN LIMITING MONNIT'S LIABILITY. NO ACTION, REGARDLESS OF FORM, ARISING OUT OF THIS AGREEMENT MAY BE BROUGHT BY CUSTOMER MORE THAN ONE YEAR AFTER THE CAUSE OF ACTION HAS ACCRUED.

IN ADDITION TO THE WARRANTIES DISCLAIMED ABOVE, MONNIT SPECIFICALLY DISCLAIMS ANY AND ALL LIABILITY AND WARRANTIES, IMPLIED OR EXPRESSED, FOR USES REQUIRING FAIL-SAFE PERFORMANCE IN WHICH FAILURE OF A PRODUCT COULD LEAD TO DEATH, SERIOUS PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE SUCH AS, BUT NOT LIMITED TO, LIFE SUPPORT OR MEDICAL DEVICES OR NUCLEAR APPLICATIONS. PRODUCTS ARE NOT DESIGNED FOR AND SHOULD NOT BE USED IN ANY OF THESE APPLICATIONS.

Certifications

United States FCC



Industry
Canada



This equipment has been tested and found to comply with the limits for a Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- *Reorient or relocate the receiving antenna*
- *Increase the separation between the equipment and receiver*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*

Warning: *Changes or modifications not expressly approved by Monnit could void the user's authority to operate the equipment.*

RF Exposure



WARNING: To satisfy FCC RF exposure requirements for mobile transmitting devices, the antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter.

Monnit Wireless Sensors and Ethernet Gateway Contain: FCC ID: ZTL-RFSC1

This device has been designed to operate with an approved antenna listed below, and having a maximum gain of 5.1 dBi. Antennas not included in this list or having a gain greater than 5.1 dBi are strictly prohibited for use with this device. The required antenna impedance is 50 ohms.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that required for successful communication.

Approved Antennas

The following antennas are approved for use with Monnit devices.

- *Hyperlink HG905RD-RSP (5.1 dBi Rubber Duck)*
- *Pulse W1063 (3.0 dBi Rubber Duck)*
- *ChangHong GSM-09 (2.0 dBi Rubber Duck)*
- *Specialized Manufacturing MC-ANT-20/4.0C (4" whip)*

Canada (IC)

English

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

The radio transmitter (IC: 9794A-RFSC1) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

French

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent émetteur radio (IC: 9794A-RFSC1) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Japan (ARIB)

All Monnit 920 MHz products have been tested and found to comply with ARIB STD-T108 standards.



210-103733

Additional Information and Support

For additional information or more detailed instructions on how to use your Monnit Wireless Sensors or the iMonnit Online System, please visit us on the web at <http://www.monnit.com/support/>.



Monnit Corporation
4403 South 500 West
Murray, UT 84123
801-561-5555
www.monnit.com